

Do I have to recalibrate every time I restart the software? (assuming my camera distance and placing remains the same)

Do I have to recalibrate every time I restart the software? (assuming my camera distance and placing remains the same)

No. If the distance between the subject and the camera is the same you do not have to recalibrate.

Online URL: <https://posturepro.phpkb.cloud/article.php?id=52>